ST-167 E-Series Control Test Mode



Test Mode Quick Reference Guide (LogiPro Control)

Summary

The information listed below is provided as general guidelines to assist in troubleshooting. It is ultimately the owner's/distributor's/ technician's responsibility to properly troubleshoot the piece of equipment down to the failed component(s). Girbau North America's will not be held liable for any part replacement and/or labor associated with the misdiagnosed troubleshooting of the equipment.

EH Series OPL/Logi Pro Test Mode			
1. With the door open, turn the	power off. Open the top dipswitch on the m	nicroprocessor. Turn the power	
back on. The display should read			
To advance a menu press Pro. To adjust the feature press either up or down. To enter some menus press Accel.			
If the TEST mode resets back to CONF, or does not complete an action; there is probably something			
wrong with that particular circui	it.		
Meaning	Display	Action	
Configure mode	CONF	Press down key	
Test Mode	TEST	Press Pro	
Model Type	High speed= EH **	Press Pro	
	Medium speed= 9** or N **		
Emergency stop circuit.	EnEr	Press E-stop and then twist on. Press Pro	
Clock option	Clc1= Clock option on	Press Accel to select hr and min	
	Clc0= Clock option off	Press up or down to change hr/min	
		Press Pro to advance	
Verify all LEDS	LEd5	Press up to test all LEDs	
		Press pro to advance to next step	
Verify display segments	di5P	Press up repeatedly to light segments	
		Press Pro to advance	
Verify if the balance switch	bAl 0 = No bal switch/switch activated	Move basket to activate switch.	
is activated. Units w/o balance switches bAl 0	bAl 1 = bal switch not activated	Press Pro to advance.	
Door closure	dr-0 = door open	Open and close the door to verify	
	dr-1 = door closed	the functionality of the door switch	
		Door needs to be closed. Press Pro to advance.	
Door lock	UnLc = door unlocked	Press up to lock the door. Press down to	
	Lc = door locked	unlock the door. Door must be locked	
		to advance. Press Pro.	
Drain valve	E-0 = drain open	Press down to open drain. Press up to	
	E-1 = drain closed	close drain. Press Pro	
Pressure transducer reading	00.50 (+/- 00.04)	Press Pro.	
Cold water fill valve	A1-0 = valve closed/ no water running	Press up to open and down close water	
	A1-1 = valve open/ water running	valve. Press Pro	
Hot water fill valve	A2-0 = valve closed/ no water running	Press up to open and down close water	
	A2-1 = valve open/ water running	valve. Press Pro	
Bleach compartment fill	d3-0 = valve closed/ no water running	Press up to open and down close water	
	d3-1 = valve open/ water running	valve. Press Pro	
Softener compartment fill	d4-0 = valve closed/ no water running	Press up to open and down close water	
	d4-1 = valve open/ water running	valve. Press Pro	
External dosing signal 1	d1-0 = valve closed/ no water running	Press up to open and down close water	
	d1-1 = valve open/ water running	valve. Press Pro	
External dosing signal 2	d2-0 = valve closed/ no water running	Press up to open and down close water	
	d2-1 = valve open/ water running	valve. Press Pro	
Third water inlet	A3-0 = valve closed/ no water running	Press up to open and down close water	
	A3-1 = valve open/ water running	valve. Press Pro	

ST-167 E-Series Control Test Mode



Test Mode Quick Reference Guide (LogiPro Control)

	valve. Let the water run until it
	stops running. Press Accel
.30 (+/- 00.04)	Monitor the reading. It should not
	decrease. If it does, it indicates a
	leaking drain valve. Press Pro
* = water temp in Fahrenheit	Press Pro
*= water temp in Celsius	
Ar	Basket will begin to spin, drain will
	open up. Press Pro
Pd2, 5Pd3, 5Pd4,	Press up to increase speed. Press down
Pd5, 5Pd6	to decrease speed. When the
	display is blinking it is getting up
	to speed. Press Stop
*	= water temp in Fahrenheit = water temp in Celsius .r d2, 5Pd3, 5Pd4, d5, 5Pd6