

# PRODUCT BULLETIN – PB-170

## Setting the Extra Options on E-Series and G-Flex Washers



### Summary


Girbau North America (GNA) has combined fifteen different Vended microprocessors into just five. The difference is instead of having a different microprocessor for each extra option, we now just have one microprocessor for the model. The extra options on all of the E-Series and G-Flex vended washing machines can be easily programmed on the washing machine by accessing the configuration menu.

### Models

All Vended E-Series and G-Flex washing machines.

### Configuration Procedure

1. With the power turned off, move the top dipswitch on the back of the microprocessor to the OPEN or OFF position.

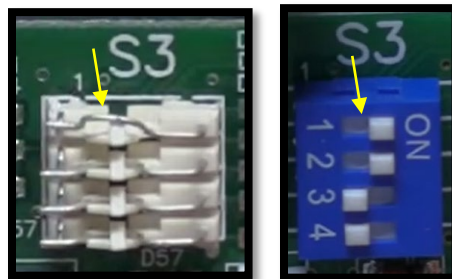

2. Turn on power to the machine. → Display shows CONf
3. Press the 1 button until the display shows Eo-0, Eo-1, Eo-2, or Eo-3.
4. Press the 2 or 4 button to select the appropriate extra option according to what type of control is on your machine.

Option	Definition
Eo-0	<b>No extra options</b>
Eo-1	<b>Extra Spin</b> , Extra Rinse, Extra Wash
Eo-2	<b>Delicate</b> , Extra Rinse, Extra Wash
Eo-3	<b>Sanitize</b> , Extra Rinse, Extra Wash

5. Remove power from the machine.
6. Move the top dip switch to the original position (closed).

### Part Numbers

Models	Microprocessor Part Number
EH020, EM025, REM025	594515
EH030, EH040, EM040 up to serial 1390498 & EM055 up to serial 1400720	594507
EH055, EH090, EH130	594499
EH060, EH070, EH080 EM040 after serial 1390499 & EM055 after serial 1400721	594481
MG040, MG055, RMG033, RMG040, RMG055, RMG070	594473

\*\*\* Always follow the warnings and procedures in the corresponding equipment instruction manual.