



GIRBAU

NORTH AMERICA


LAUNDRY BEYOND LAUNDRY

GMP Tool Software

- The GMP Tool is a software base program that will allow you to update/ load software from your computer to washers and dryers
- Once the software is loaded to your computer you won't need to reload it, you can just proceed to the software loading portion.
- Requirements
 - Windows operating system of Windows 10 or 11
 - GMP Tool Program

Copy contents of jump drive onto the C: of the Windows laptop to a location that can be referenced in the future.

- Insert jump drive into the computer
- Double click on USB
- Double click on GMPTools V1.8

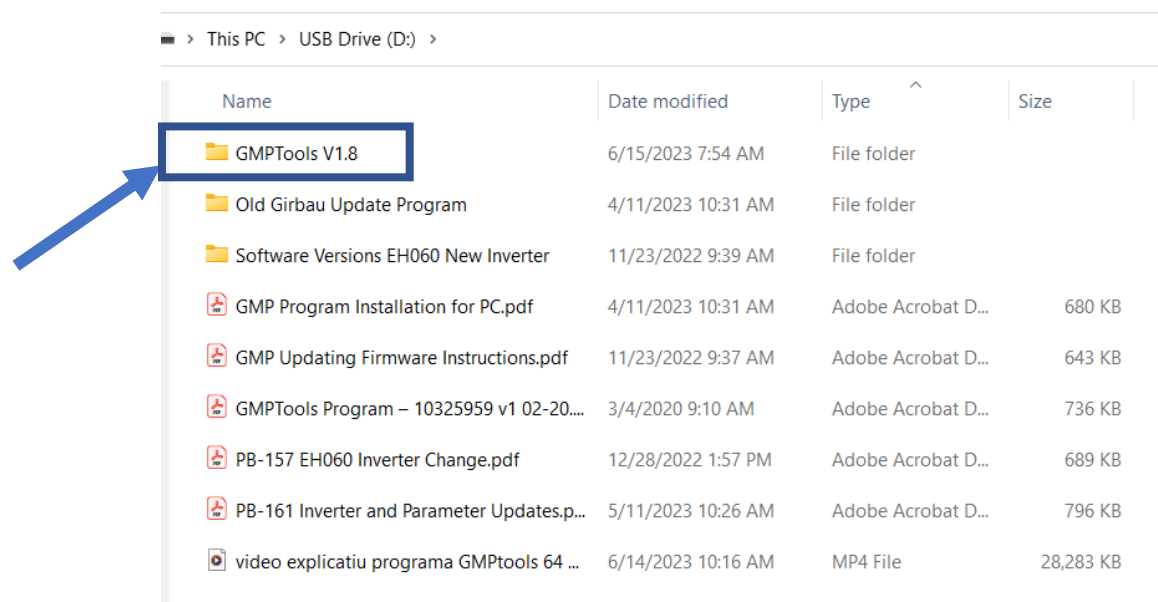


- Right click on CDM212364_Setup


This PC > USB Drive (D:) > GMPTools V1.8

Name	Date modified	Type	Size
Other setup Application	3/23/2023 11:09 AM	File folder	
CDM212364_Setup.exe	7/12/2021 1:11 PM	Application	2,212 KB
Setup.msi	11/16/2020 2:25 PM	Windows Installer ...	854 KB

- Click on Run as administrator

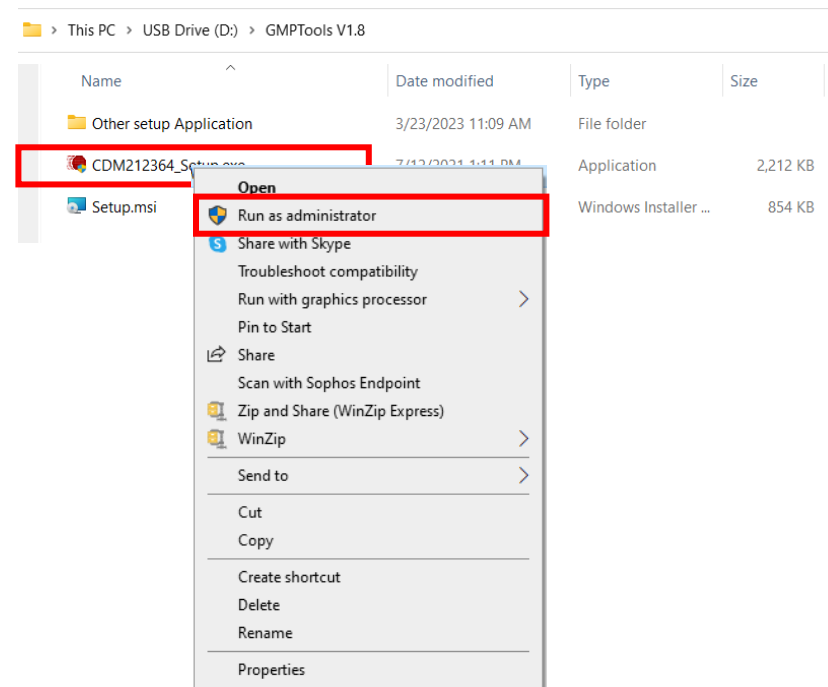


- Click on Yes

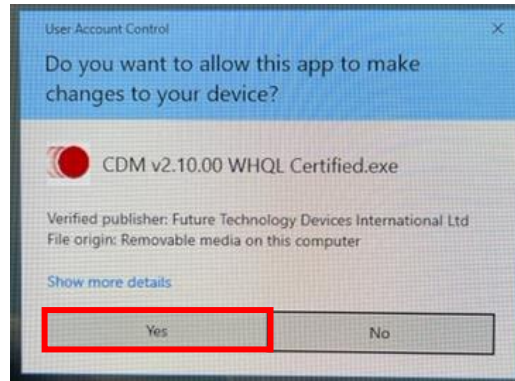


- Click on Extract




•Click on Next

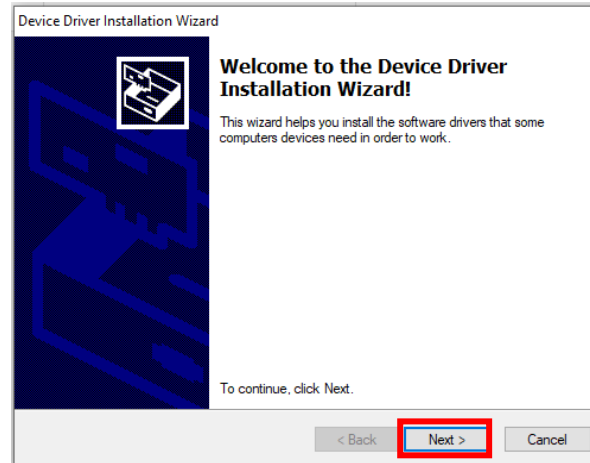

•Click on Finish

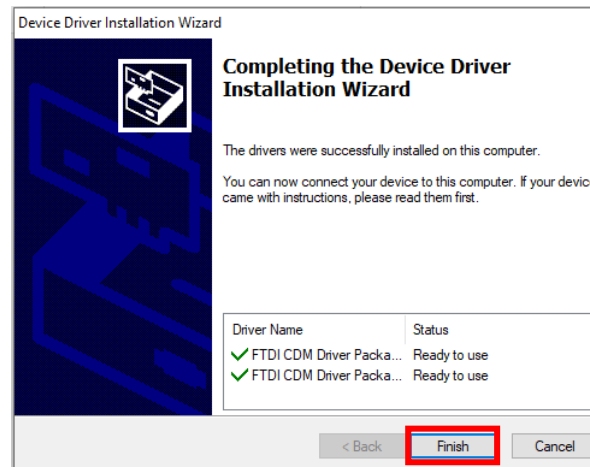


•Double click on Setup Windows Installer

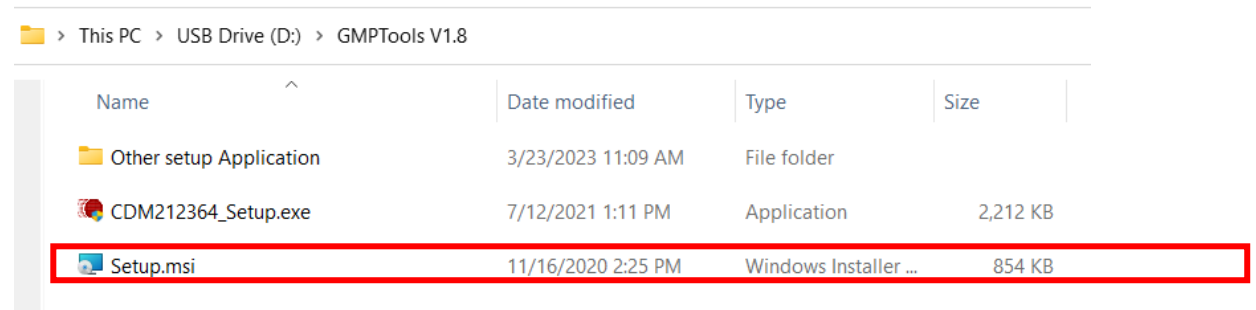


Name	Date modified	Type	Size
Other setup Application	3/23/2023 11:09 AM	File folder	
CDM212364_Setup.exe	7/12/2021 1:11 PM	Application	2,212 KB
Setup.msi	11/16/2020 2:25 PM	Windows Installer ...	854 KB


•Click on Accept

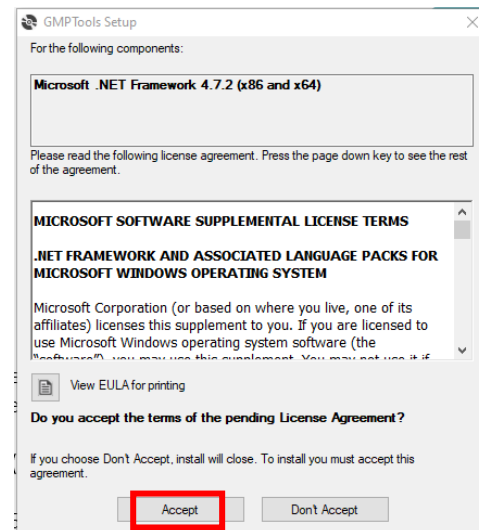


•Click **Next**

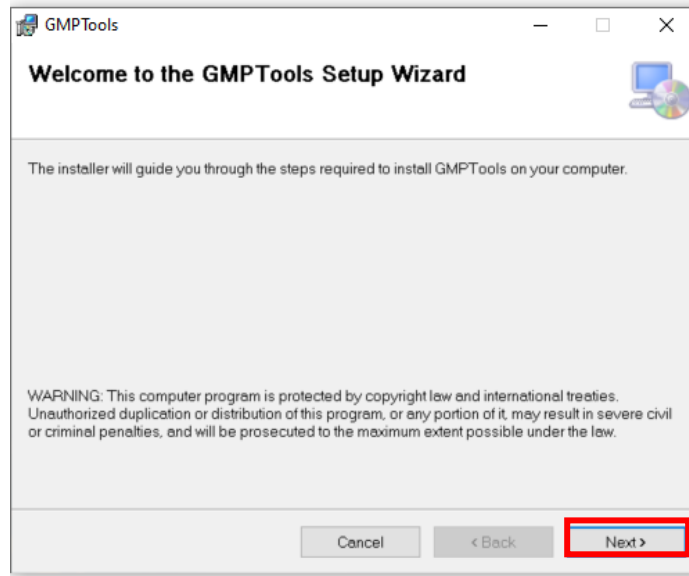


•Click **Next** leave it set to **Just me**

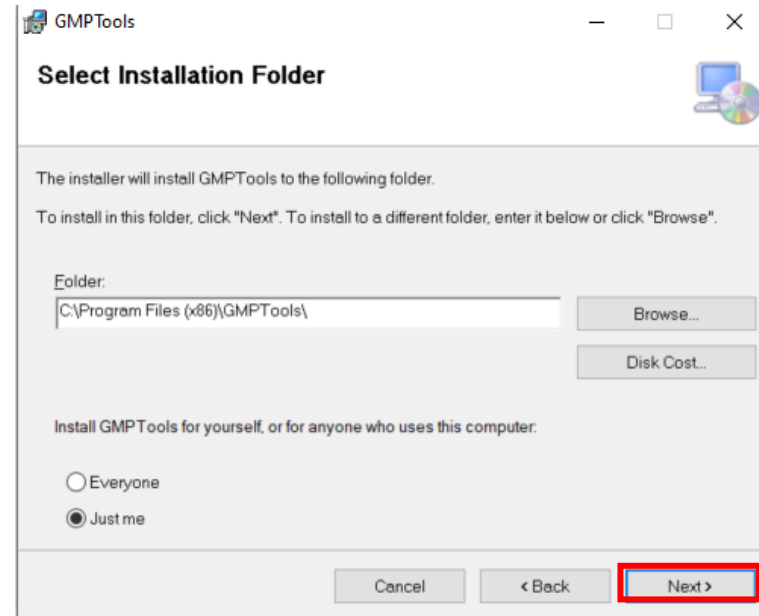


•Click **Next**

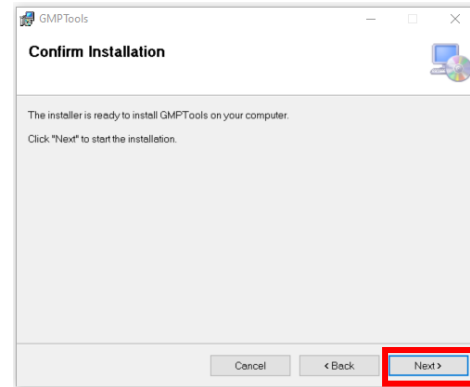


•Click on the warning that appears on the bottom of the screen
Some computers will skip this step.

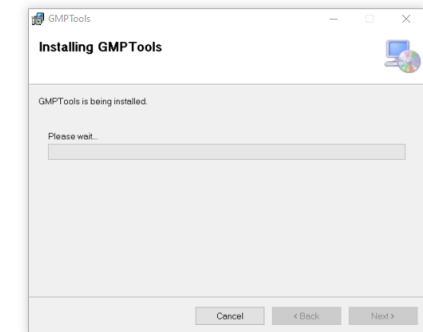



- Allow the app to make changes by clicking **Yes**

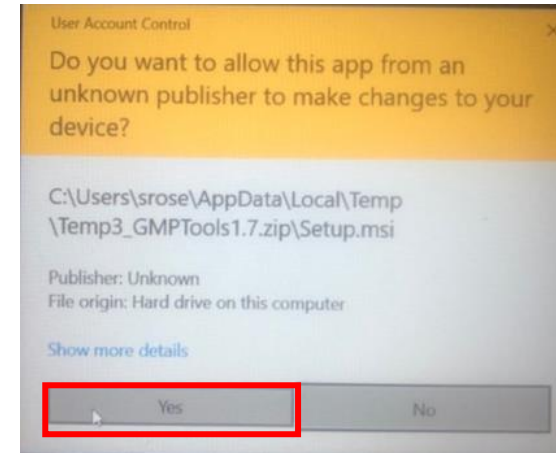

- Finish installation by clicking **Close**

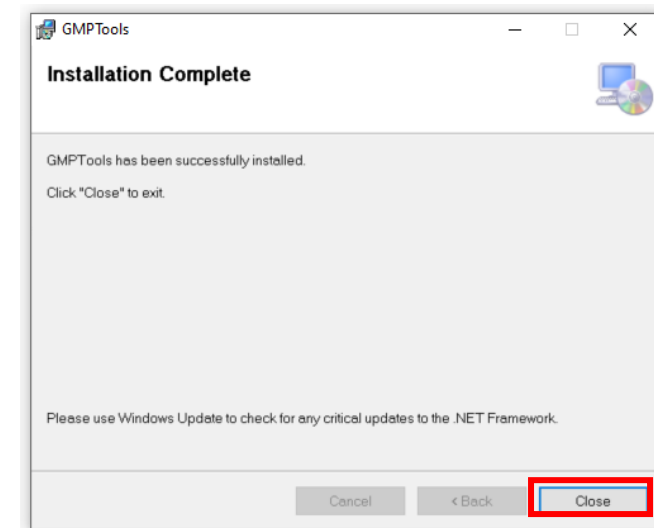


-
- The GMPTools shortcut icon will appear on your Desktop. Sometimes this shortcut will not work. If it doesn't work this error will appear.

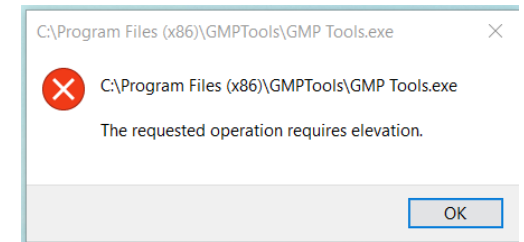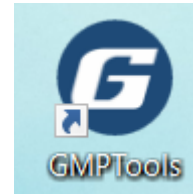



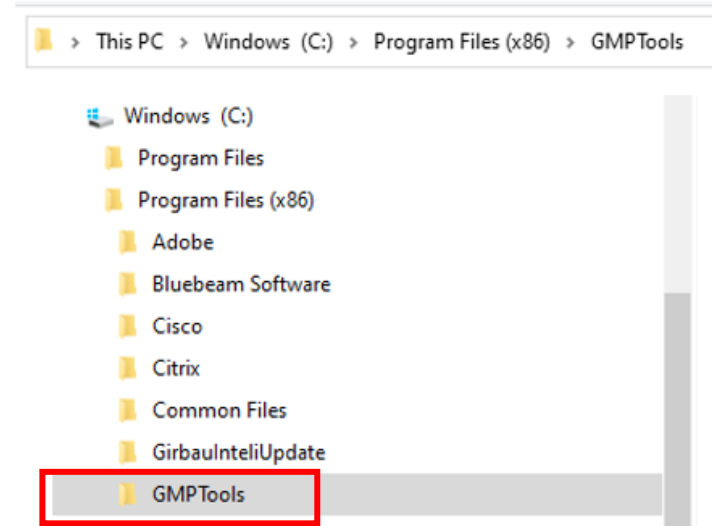


- If that error appears you need to do the following:






- Click on Windows (C:)
- Click on Program Files (x86)
- Click on GMPTools





- Right click on GMP Tools Application


 FTD2XX_NET.dll	1/24/2017 9:23 PM	Application extension	74 KB
 GMP Tools Icon	6/23/2017 2:04 PM	Icon	98 KB
 GMP Tools	9/12/2018 4:14 PM	Application	348 KB
 GMP Tools.exe.config	1/24/2017 9:46 PM	CONFIG File	1 KB
 System.Net.Http.dll	5/28/2014 6:35 AM	Application extension	82 KB

- Click on **Run as administrator**

 FTD2XX_NET.dll	1/24/2017 9:23 PM	Application extension	
 GMP Tools Icon	6/23/2017 2:04 PM	Icon	
 GMP Tools	9/12/2018 4:14 PM	Application	
 GMP Tools.exe.config	1/24/2017 9:46 PM	CONFIG File	
 System.Net.Http.dll	5/28/2014 6:35 AM	Application extension	

Open
 Run as administrator
 Share with Skype
Troubleshoot compatibility

-
- Click on **Yes** to allow changes

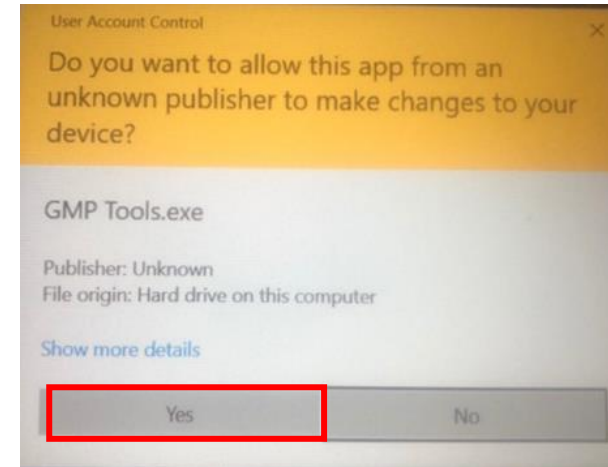

- If successfully installed this page will appear.

